

1D Barcode Scanner

Quick Start Guide

System Setting



Factory Defaults



Version

Interface Setting



USB Mode*



RS232 Mode

Reading Mode



Trigger Mode*



Continuous Mode



Automatic mode

Note: When using this mode, first you need to switch to trigger mode and then scan automatic mode.

Suffix Setting



Add CR*



Add LF



Add CR+LF



None

Rate



9600*



115200