



1D Wireless Laser Barcode Scanner Quick Reference Guide BS-L150s WL



 
Version




Power off (Note ,After scan this barcode there will be a long beep ,then scanner goes to power off status)

The correct usage of barcode scanner:


- 1,Make sure barcode scanner, cable ,host device connect properly;
- 2,Press trigger button and the red laser line appears , and move the laser line to cover barcodes completely ,adjust barcode scanner's distance and angle to figure out best reading status ;
- 3,Do not scan the setting barcodes in the manual without instruction ,it may cause barcode scanner not work properly ;
- 4,Avoid 90 degree to read barcodes.




Correct reading

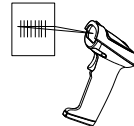

Correct reading

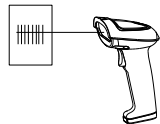

Incorrect reading

 

Incorrect reading

Product feature:

- 1,Powerful decoding chip and support most common 1D & 2D barcodes;
- 2,Fast and accurate reading speed no less than 150scans/sec;
- 3,Easy to use and compatible with windows , android ,linux OS;
- 4,long working range and support off-line automatic data save;
- 5,Easy to pair with data receiver which only need to read two barcode.

E Waste Management Instructions:

Do's and Dont's



Do's:

- Always drop your used electronic products& Accessories/Consumables /spares/ batteries and packaging materials after the end of their life at the nearest collection point;
- Separate the packaging material according to responsible waste disposal options and sorting for recycling;
- Keep the product in isolated area, after it becomes non-functional/un-repairable so as to prevent its accidental breakage.

Dont's:

- The product is not meant for re-sale of any unauthorized agencies/scrap dealers;
- Never dump e-waste in garbage bins;
- Do not dispose off your product in at municipal waste bins;
- Do not throw used batteries into household waste.

Waste Collection:

- TVS-E has put in place a pan India collection mechanism to assist its customers in depositing their e-waste as per the new E-waste (Management) Rules, 2016 effective from 1st October, 2016;
- You can deposit the WEEE at the nearest Collection Point. Details of the location of Collection Points and Collection Centres information are also available on this website;
- You can dispose of a used TVS-E product very easily and responsibly. Simply call at 1800425 4528 and drop it at your nearest Collection points . All these E-waste will be consolidated and forwarded to Tumkur Collection point for final disposal through Authorized E-waste Recycler;
- TVS-E assures all its customers that all its e-waste collected under these Rules will be recycled/ disposed of by an authorized e-waste Recycler as per the E-waste Management Rules, 2016.

Introduction

This is a simple user's guide ,please contact local distributor for more support and details



Factory Default



Forced pairing

Pair instruction

Step 1 :Scan “Factory Default”



Step 2 :Connect Data receiver to host device

Step 3:Scan “Forced pairing “during the data receiver led indicator flashing ,there will be two beeps after succeed pair



Wireless Mode



Inventory



Normal



Automatic storage (default)

Remark:

- 1.Normal Mode: the data will be uploaded to host device immediately after scan ,out of range it will not save the data ,and there will be 2 alarm beeps out of range;
- 2.Inventory Mode: the data will be saved in the memory chip ,and upload data to host device as instructed;
Eg: scan the “upload all data and clear”, the scanner will upload all data saved in the memory chip and cleared the original data;
- 3.Automatic storage Mode: the data will be uploaded to host device immediately after scan if the scanner in range ,the data will saved in the memory chip if the scanner out of range which will heard 2 alarm beeps , press the scanner trigger to upload the saved data after back to range, and the original data in the memory chip will be cleared .

Data upload instruction in inventory mode



Upload all data and clear
(Note: Upload all stored data and clear them)



Upload all data But not clear
(Note: upload all stored data and do not clear the data)



Upload one data and delete



Upload one data But not delete



Display all data



Data delete

Scan mode



Manual (Default)



Continuous



Auto-Flashing

Auto-sense mode

Enable

Disable

Image Inverted

Direct

Reverse

Buzzer

ON

OFF

High

Low

No upload successful notifications
(Note: when the scanning gun scans this barcode successfully, the upload data would make a sound "Beep".)

Upload successful notifications
(Note: when the scanning gun scans this bar code successfully, the upload data would make a sound "Beep" twice.)

Keyboard language

USA (default)

Germany

France

British

Russia

Italy

Japan

Canada

Keyboard Caps Lock Control

Capitalize

Lower case

Case Swap

None

Suffix setting

CR

CR & LF

None

Symbology configuration

Enable UPCA to EAN13

Disable UPCA to EAN13 (default)

Enable UPCE to UPCA

Disable UPCE to UPCA (default)

Enable EAN13 to ISBN

Disable EAN 13 to ISBN (default)

Enable EAN13 to ISSN

Disable EAN13 to ISSN (default)

Enable the 5-bit additional code

Enable the 2-bit additional code

Disable the additional code (default)

Hide front 1 digit character

Hide front 2 digit character

Hide front 3 digit character

Hide last 1 digit character

Hide last 2 digit character

Hide last 3 digit character

Prefix F7 before all barcodes